

Installation, Operating,  
and Service Manual

# BADU<sup>®</sup> EcoM2/S90

Swimming Pool Pump



**SPECK** X  
pumps

# Table of Contents

<b>1</b>	<i>Pump Manual</i>	<i>3 - 8</i>
<b>2</b>	<i>Motor Manual</i>	<i>9- 24</i>

## SAVE THESE INSTRUCTIONS!

### Technical Support:

**Address:** Speck Pumps  
8125 Bayberry Road  
Jacksonville, FL. 32256  
USA

**Hours:** (Monday - Friday) 8:00 am to 5:00 pm EST

**Toll Free:** 800-223-8538

**Phone:** 904-739-2626

**Fax:** 904-737-5261

**Website:** [www.usa.speck-pumps.com](http://www.usa.speck-pumps.com)

<b>Date of Installation:</b>	
<b>Installed by:</b>	
<b>Serial Number:</b>	
<b>For Service Call:</b>	

*Manufactured by Speck Pumps, Jacksonville Florida USA, © 2017 All Rights Reserved.*

This document is subject to change without notice.

Rev. 0317 SW

# OWNER'S MANUAL

## Swimming Pool Pump

**SPECK** X  
pumps

## READ THIS MANUAL CAREFULLY BEFORE USING THE SPECK PUMP

**Important Notice:** This manual contains important information about the installation, operation and safe use of this product. This information should be given to the owner and/or operator of this equipment.

**WARNING:** This product must be installed and serviced by a qualified pool professional, and must conform to all national, state, and local codes.

**WARNING:** Before installing this product, read and follow all warning notices and instructions which are included. Failure to follow safety warnings and instructions can result in severe injury, death, or property damage. Call (800) 223-8538 or visit [www.usa.speck-pumps.com](http://www.usa.speck-pumps.com) for additional copies of these instructions.

---

## IMPORTANT SAFETY INSTRUCTIONS

---

When installing and using this electrical equipment, basic safety precautions should always be followed, including the following:

### 1. READ AND FOLLOW ALL INSTRUCTIONS.

**2. WARNING** - To reduce the risk of injury, ***DO NOT*** permit children to use this product unless they are closely supervised at all times.

**3. WARNING** - Risk of Electrical Shock. Connect only to a branch circuit protected by a ground-fault circuit interrupter (GFCI). Contact a qualified electrician if you cannot verify that a circuit is protected by a GFCI.

**4. WARNING** - To reduce the risk of electric shock, replace any damaged cord immediately.

**5. *DO NOT*** install within an outer enclosure or beneath the skirt of a hot tub or spa.

**6. CAUTION** - This pump is for use with permanently-installed pools and may also be used with hot tubs and spas if so marked. ***DO NOT*** use with storable pools. A permanently-installed pool is constructed in or on the ground or in a building such that it cannot be readily disassembled for storage. A storable pool is constructed so that it is capable of being readily disassembled for storage and reassembled to its original integrity.

**7.** The unit must be connected only to a supply circuit that is protected by a ground-fault circuit-interrupter (GFCI). Such a GFCI should be provided by the installer and should be tested on a routine basis. To test the GFCI, push the test button. The GFCI should interrupt power. Push the reset button. Power should be restored. If the GFCI fails to operate in this manner, the GFCI is defective. If the GFCI interrupts power to the pump without the test button being pushed, a ground current is flowing, indicating the possibility of an electric shock. Do not use this pump. Disconnect the pump and have the problem corrected by a qualified service representative before using.

**8. TO REDUCE RISK OF ELECTRICAL SHOCK,** A copper bonding connector (8 AWG) is provided for bonding the motor to all metal parts of the swimming pool, spa, or hot tub structure and to all electrical equipment, metal conduit, and metal piping within 5 feet of the inside walls of a swimming pool, spa, or hot tub, when the motor is installed within 5 feet of the inside walls of the swimming pool, spa, or hot tub.

**NOTE:** To installer and/or operator of the Speck Swimming Pool Pump; the manufacturer's warranty will be voided if the pump is improperly installed and/or operated.

### 9. SAVE THESE INSTRUCTIONS!

---

## SECTION 1 EQUIPMENT OPERATION AND MAINTENANCE

---

### 1/1 LOCATION

1. Locate the pump as close to the pool as practical. Consult local codes for minimum distance between pool and pump.
2. The piping should be as direct and free from turns or bends as possible, as elbows and other fittings greatly increase friction losses.
3. Place pump on a solid foundation which provides a rigid and vibration-free support so that it is readily accessible for service and maintenance.
4. Install the pump in a well ventilated location protected from direct sunlight and excessive moisture. (rain, sprinklers, etc.)
5. Protect the pump against flooding and excess moisture, prevent foreign objects from clogging air circulation around motor. All motors generate heat that must be removed by providing proper ventilation.
6. **DO NOT** store or use gasoline or other flammable vapors or liquids in the vicinity of this pump. **DO NOT** store pool chemicals near the pump.
7. **DO NOT** remove any safety alert labels such as **DANGER**, **WARNING**, or **CAUTION**. Keep safety labels in good condition and replace missing or damaged labels.
8. Provide access for future services by leaving a clear area around the pump. Allow plenty of space above the pump to remove lid and basket for cleaning.

### 1/2 INSTALLATION

1. When connecting pipework to pump with threaded ports it is recommended that thread seal tape be used. If the suction pipe is not sealed correctly, the pump will not prime properly and will pump small volumes of water or none at all.
2. When installing the pump, care should be taken to see that the suction line is below water level to a point immediately beneath and the pump to ensure quick priming via a flooded suction line. The height between the pump and the water level should not be more than five (5) feet.
3. Suction and discharge line should be independently supported at a point near the pump to avoid strains being placed on the pump.
4. It is recommended to install a gate check valve in both the suction and discharge line in the event that the pump must be removed for servicing.

5. Before starting the pump for the first time, remove the see-through lid. (Turn lid ring counterclockwise to remove.) Fill strainer tank with water until it is level with the suction inlet. Replace lid with locking ring. *Hand-tighten* the lid to make an air-tight seal. **DO NOT use any tools to tighten the lid.**

6. When installing and using the motor, basic safety precautions should be done by a licensed electrician in accordance with local codes. Be certain that the motor frame is grounded. Motor name plate has voltage, phase, ampere draw and other motor information as well as wiring connection instructions.

**BONDING:** As required by National Electrical Code Article 680-22, the pump motor must be electrically bonded to the pool structure (reinforced bars, etc.) by a solid copper conductor not smaller than #8 AWG (8.4 mm<sup>2</sup>) wire via the external copper bonding lug on the pump motor.

**GROUNDING:** Permanently ground the pump motor using a conductor of appropriate size. Connect to the #10 green headed ground screw provided inside the motor terminal box,

For more information about the motor operation refer to the motor manual (refer to page 9).

*NOTE: **DO NOT** connect to electric power supply until the unit is permanently grounded*

### 1/3 MAINTENANCE

The pump requires little or no service other than reasonable care and periodic cleaning of the strainer basket. **DO NOT** strike basket to clean. When cleaning the basket inspect the lid o-ring for damage and replace if necessary.

*NOTE: It is normal for a few drops of water to escape from the mechanical seal from time to time. This is especially true during the break-in period.*

The mechanical seal may come worn and/or loose during the course of time, depending on the running time and water quality. If water continually leaks out, a new mechanical seal should be fitted. After long periods of NOT operational (seasonal storage, etc.), the pump must be checked for ease of rotation while it is switched off.

**WARNING:** *Before servicing the pump, switch off the circuit breakers at the power source. Severe personal injury or death may occur if the pump starts while your hand is inside the pump.*

## SECTION 1 EQUIPMENT OPERATION AND MAINTENANCE - Continued

### 1/3 MAINTENANCE - continued

Place a screwdriver, allen wrench or appropriate tool in the end of the motor shaft and turn it clockwise. *OR* Remove the fan cover and turn the fan in a clockwise direction manually. This may require removal of the cover at the rear of the motor or small circular cap at the rear center of the motor.

### To Replace the Mechanical Seal

To replace the mechanical seal, remove the eight (8) screws holding the casing to the flange. Slide the motor part including the seal housing out. Remove impeller by turning it counter-clockwise when facing it, while holding the motor shaft with a wrench or screwdriver at rear end of motor. Pull the impeller from the motor shaft noting the position of the seal. Remove the seal from the impeller shaft. To re-assemble, reverse the process. Use only water as a lubricant to install both sides of the seal. ***NO NOT*** use grease or lube to install seal. It will damage the seal and cause failure. Make sure both sides of the seal (ceramic and spring portion) are clean. Gently wipe polished faces with soft and dry cotton cloth. Surfaces can easily be damaged by dirt and scratching. (Use a drop of loc-tite to secure the impeller nut.)

### 1/4 WINTERIZING

**CAUTION:** The pump must be protected when freezing temperatures are expected.

### 1/4 WINTERIZING - continued

**CAUTION:** Allowing the pump to freeze will cause severe damage and void the warranty.

There are two options when winterizing the pump:

#### Option 1:

Drain all the water from the pump, system equipment, and piping. Remove drain plugs. ***DO NOT*** replace plugs. Store the plugs in the empty strainer basket for winter. Keep the motor covered and dry.

#### Option 2:

Drain all the water from the pump, system equipment, and piping. Remove the pump and motor from the plumbing and store indoors in a warm and dry location.

**NOTE:** When the winter season is over the pump will need to be check and primed prior to start.

**CAUTION: DO NOT** run the pump dry. If the pump is run dry, the mechanical seal will be damaged and the pump will start to leak at the seal. If this occurs, the mechanical seal will need to be replaced. ***ALWAYS*** maintain the proper water level in your pool. Continued operation in this manner could cause a loss of pressure, resulting in damage to the pump casing, impeller, and mechanical seal.

## SECTION 2 TROUBLESHOOTING GUIDE

PROBLEM	POSSIBLE CAUSES	SOLUTION
1. Pump will not prime.	<p>a. Suction air leak.</p> <p>b. No water in pump.</p> <p>c. Closed valves or blocked lines.</p> <p>d. Low voltage to motor.</p>	<p>Make sure the see-through lid and o-ring are clean and properly positioned. Hand tighten see-through lid. Tighten all pipes and fittings on suction side of the pump. Be sure water in the pool is high enough to flow through skimmer.</p> <p>Make sure strainer tank is full of water.</p> <p>Open all valves in system. Clean skimmer and strainer tank. Open pump and check for clogging of impeller.</p> <p>Check voltage at motor. If low, pump will not come up to speed.</p>
2. Motor does not turn.	<p>a. No power to motor.</p> <p>b. Pump jammed.</p>	<p>Check that all power switches are on. Be sure fuse or circuit breaker is properly set. Time set properly? Check motor wiring at terminals.</p> <p>With power off, turn shaft. It should spin freely. If not, disassemble and repair.</p>

## SECTION 2 TROUBLESHOOTING GUIDE - continued

PROBLEM	POSSIBLE CAUSES	SOLUTION
3. Low flow.	<ul style="list-style-type: none"> <li>a. Dirty filter.</li> <li>b. No skimmer basket.</li> <li>c. Closed valves or blocked lines.</li> <li>d. Suction air leak.</li> </ul>	<p>Back wash filter when filter pressure is high, or clean cartridges.</p> <p>Clean skimmer and pump strainer basket.</p> <p>See problem 1.</p> <p>See problem 1.</p>
4. Noisy operation of motor.	<ul style="list-style-type: none"> <li>a. Bad bearings.</li> </ul>	Noise when shaft is turned up by hand. Motor is hot in bearing area when running. Replace bearing.
5. Motor runs hot.	<p>These motors will run hot to the touch, however, this is normal. They are designed that way. Thermal overload protector will function to turn them off if there is an overload or high temperature problem. Excessive heat can be cause by:</p> <ul style="list-style-type: none"> <li>a. Low voltage.</li> <li>b. Installed in direct sun.</li> <li>c. Poor ventilation.</li> </ul>	<p>Increase size of electrical wire. Be sure motor is operating on correct voltage.</p> <p>Shield motor from sun's rays.</p> <p>Do not tighten cover or enclosure motor.</p>
6. Noisy operation of pump.	<ul style="list-style-type: none"> <li>a. Air leak in suction line. Bubbles in water returning to pool at inlet.</li> <li>b. Restricted suction line due to blockage or under size pipe. Indicated by high vacuum reading at pump suction.</li> <li>c. Foreign matter (gravel, metal, etc.) in pump impeller.</li> <li>d. Cavitation.</li> </ul>	<p>Repair leak. Check suction pipe, see-through lid in place? O-ring clean?</p> <p>Remove blockage or increase suction pipe size. Make sure strainer tank is clean. Are all suction valves fully open?</p> <p>Disassemble pump and remove foreign matter from impeller.</p> <p>Improve suction conditions. (Reduce suction life, reduce number of fittings, increase pipe size.) Increase discharge pressure and reduce flow by throttling discharge valve.</p>
7. Motor overload protection "kicks out".	<ul style="list-style-type: none"> <li>a. Motor is not connected properly.</li> <li>b. Low voltage due to under size wire or low incoming voltage.</li> <li>c. Wrong size heaters in protective device.</li> <li>d. Overload due to binding in pump or wrong size impeller.</li> </ul>	<p>Check wiring diagram on motor.</p> <p>Check with volt meter. Increase size of supply wire. Reports low supply voltage to power company. Voltage at motor must be within 10% of motor nameplate voltage.</p> <p>Heaters should be one size larger than full load amps shown on motor nameplate.</p> <p>Indicated by high amperage readings on motor, binding shaft. Disassemble unit and correct.</p>

## SECTION 3 SERVICING INFORMATION

When calling the manufacturer regarding a question or problem with your pump, please have the serial number available. The serial number is located on the pump either on the flange or motor labels.

Replacement parts may be available from your installer. Call, fax, or write: Speck Pumps at 8125 Bayberry Road, Jacksonville, Florida 32256 Phone (904) 739-2626 Fax (904) 737-5261, e-mail: info.usa@speck-pumps.com



---

## SECTION 4 LIMITED WARRANTY

---

Speck Pumps-Pool Products, Inc. grants solely to the original consumer purchaser ("Buyer") of the pump and motor the following personal, non-transferable and limited warranty on the following terms and conditions (the "Limited Warranty"): the pump and motor is warranted to be free of material defects in materials or workmanship under normal use for a period of two (2) year beginning on the date of the Buyer's purchase of the pump and motor. Notwithstanding any provisions herein to the contrary, the warranties and obligations hereunder shall not in any event extend for more than three (3) years beyond the date of shipment of the pump and motor from the factory (the "Limited Warranty Period"). The Limited Warranty is subject to each of the following additional terms and conditions:

**1. IN THE EVENT OF ANY BREACH OF THE LIMITED WARRANTY, SPECK PUMPS - POOL PRODUCTS, INC.'S ENTIRE OBLIGATION AND LIABILITY TO BUYER, AND BUYER'S SOLE AND EXCLUSIVE REMEDY SHALL BE AS FOLLOWS:** Speck Pumps - Pool Products, Inc. will, at its option, either repair or replace the pump and motor or refund to Buyer the purchase price actually paid by Buyer for the pump and motor subject to the Limited Warranty. Speck Pumps - Pool Products, Inc. shall have no obligations under the Limited Warranty unless Buyer delivers timely written notice to Speck Pumps - Pool Products, Inc. of the Limited Warranty claim within the Limited Warranty Period and returns the pump and motor to Speck Pumps - Pool Products, Inc. if requested. To the fullest extent permitted by law, Speck Pumps - Pool Products, Inc. expressly disclaims any liability for, and the Limited Warranty does not include or cover, any labor, costs or other expenses in connection with the removal, transportation, shipment, insurance, replacement, repair, or installation of repaired or replaced parts or for any other costs or expenses or damages to property or things including, but not limited to, those arising in connection with the use of, or inability to use, the pump and motor.

2. To the fullest extent permitted by law, the Limited Warranty will be void and of no force or effect and Speck Pumps - Pool Products, Inc. will have no liability, responsibilities or obligations to Buyer or with respect to the pump and motor in the event of the occurrence of any one or more of the following:

- (a) Any damage to the pump and motor caused by Buyer, any third party, ground movement, other natural forces, acts of God or any other sources or causes not arising from a breach of the Limited Warranty, excluding ordinary wear and tear;
- (b) Any replacement, modification, alteration or repair of any parts or components of the pump and motor by anyone other than Speck Pumps - Pool Products, Inc.;
- (c) Any abuse, misuse, accident, tampering with, improper installation or modification of the pump and motor or any other actions, inactions or failures to act that violate the terms and conditions of this Limited Warranty;
- (d) Buyer's failure or inability to present an invoice, bill, receipt or other documentation clearly evidencing that the pump and motor was installed and maintained in strict compliance with this Limited Warranty and that the claim was timely submitted within the Limited Warranty Period; and/or
- (e) Buyer's failure to comply with the conditions and contingencies set forth in paragraph 3 below.

3. The Limited Warranty is expressly conditioned and contingent upon Buyer's strict compliance with each of the following:

- (a) Installation of the pump and motor by an experienced and qualified pool industry professional and a licensed electrician who is licensed within the jurisdiction in which the pump and motor is installed and will be used; and
- (b) Buyer's operation and maintenance of the pump and motor in strict accordance with Speck Pumps - Pool Products, Inc.'s printed operator/maintenance manuals delivered with the pump and motor.

**4. DISCLAIMER: THE LIMITED WARRANTY IS THE ONLY WARRANTY MADE AND IS IN LIEU OF ALL OTHER WARRANTIES, AND ANY AND ALL IMPLIED WARRANTY OR CONDITION OF MERCHANTABILITY, THE IMPLIED WARRANTY AGAINST INFRINGEMENT, AND THE IMPLIED WARRANTY OR CONDITION OF FITNESS FOR A PARTICULAR PURPOSE ARE EXPRESSLY LIMITED IN THEIR SCOPE AND DURATION TO THE TWO YEAR TERM OF THE LIMITED WARRANTY SET FORTH HEREIN. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO THE BUYER.**

---

## **SECTION 4 LIMITED WARRANTY - continued**

---

**5. TO THE FULLEST EXTENT PERMITTED BY LAW, IN NO EVENT SHALL SPECK PUMPS - POOL PRODUCTS, INC. OR ITS OFFICERS, DIRECTORS, EMPLOYEES, SHAREHOLDERS, AGENTS, OR REPRESENTATIVES BE LIABLE FOR ANY SPECIAL, INDIRECT, INCIDENTAL, EXEMPLARY OR CONSEQUENTIAL DAMAGES OR LOSS, INCLUDING TIME, MONEY, GOODWILL, AND LOST PROFITS IN ANY WAY WHICH MAY ARISE HEREUNDER OR FROM THE USE OF OR INABILITY TO USE THE PUMP AND MOTOR OR THE PERFORMANCE OR NONPERFORMANCE OF ANY OBLIGATION UNDER THIS LIMITED WARRANTY. THIS PARAGRAPH, THE WARRANTY DISCLAIMERS IN PARAGRAPH 4 ABOVE, AND THE SOLE AND EXCLUSIVE REMEDY SET FORTH IN PARAGRAPH 1 ABOVE SHALL APPLY EVEN IF SPECK PUMPS - POOL PRODUCTS, INC. HAS BEEN NOTIFIED OF THE POSSIBILITY OR LIKELIHOOD OF SUCH DAMAGES OCCURRING, WHETHER SUCH LIABILITY IS BASED ON CONTRACT, TORT, NEGLIGENCE, STRICT LIABILITY, PRODUCTS LIABILITY OR OTHERWISE, AND EVEN IF ANY REMEDY STATED HEREIN FAILS OF ITS ESSENTIAL PURPOSE. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF SPECIAL, INDIRECT, INCIDENTAL, EXEMPLARY OR CONSEQUENTIAL DAMAGES OR LOSS, SO THE ABOVE EXCLUSIONS AND LIMITATIONS MAY NOT APPLY.**

6. This Limited Warranty gives the Buyer specific legal rights, and the Buyer may also have other rights, which vary from state to state.

7. A return merchandise authorization ("RMA") must be obtained from Speck Pumps - Pool Products, Inc. before returning any product. Products returned without an RMA will be refused and returned, unopened, to the Buyer. All returned products are to be sent freight prepaid and insured for Buyer's protection to the manufacturer at 8125 Bayberry Road, Jacksonville, Florida 32256. Under no condition will products be accepted after the expiration of the Limited Warranty Period. Speck Pumps - Pool Products, Inc. shall not bear any costs or risks incurred by Buyer in shipping a defective pump and motor to Speck Pumps - Pool Products, Inc. or in shipping a repaired or replaced pump and motor to Buyer.



# 2EZ™ S P E E D

TWO SPEED POOL MOTOR WITH PROGRAMMABLE CONTROL / TIMER

· INNOVATION MADE EZ™ ·

## INSTALLATION AND MAINTENANCE MANUAL

These instructions cover the motor and the operation of the user interface timer/controller which may be integrated with the motor.



**Nidec Motor Corporation**



Save this instruction manual for future reference.

# IMPORTANT SAFETY INSTRUCTIONS

## 2EZ Speed™ Motor Control/Timer Installation & Maintenance Manual

Save this Instruction Manual for future reference.

### Table of Contents

Motor Control/Timer Specifications . . . . .	3
About the 2EZ Speed™ Motor Control/Timer . . . . .	3
Important Safety Instructions. . . . .	4-5
General Installation Instructions . . . . .	6
Basic Motor/Timer Operation. . . . .	6
User Interface Identification. . . . .	7-9
Quick Start Programming . . . . .	10
Detail Programming. . . . .	11-13
How to Connect. . . . .	14
Freeze Sensor. . . . .	14
Locking the Keypad. . . . .	15
Operating the 2EZ Speed™ Pool Motor/Control with other Equipment Pad Items . . . . .	15
General Troubleshooting . . . . .	16
How to Lower Utility Bills. . . . .	16
Recommended Maintenance. . . . .	17
Limited Warranty . . . . .	17

For Technical Assistance or Questions related to your 2EZ Speed™ Motor Control/Timer:


**Call our Pool Motor Product Services Hotline:**

**1-800-566-1418**

**Or email questions to:  
[motorhelp@nidec-motor.com](mailto:motorhelp@nidec-motor.com)**

**Or visit our web site at:  
[www.nidec-motor.com/pool](http://www.nidec-motor.com/pool)**

## 2EZ Speed™ Motor Control/Timer Specifications

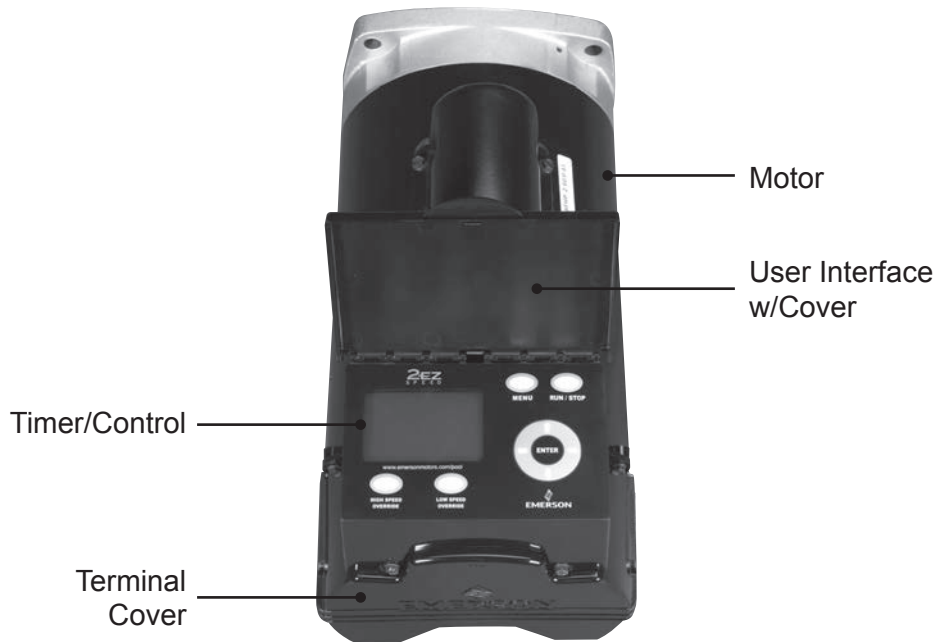

- The 2EZ Speed™ motor control is designed to operate from a typical U.S. residential single-phase 230 volt line supply. Operational voltage range – 207-253 VAC 60 hertz.
- The motor operates at two speeds; high speed (approximately 3450 RPM) and low speed (approximately 1725 RPM).
- Maximum continuous current: See motor nameplate for motor rating, control rated for 14.0 amps maximum.

- **Energy Efficient:** Did you know that you can save the most energy by maximizing your low speed operation, and yet still clean your pool, just by customizing your settings? To determine your energy savings, try our energy calculator online: [www.nidec-motor.com/Pool](http://www.nidec-motor.com/Pool)

Mounted on the 2EZ Speed™ motor is a user interface which allows the pool owner to easily control the operating times and motor speeds. Schedules can be programmed for weekdays: Monday through Friday and weekends: Saturday and Sunday.

### About the 2EZ Speed™ Motor/Control

The 2EZ Speed™ motor and timer is an easy-to-install two-speed pool pump motor with an integrated programmable timer, designed to achieve maximum energy efficiency and utility dollar savings.

- **Easy Installation:** Drop-in design allows for fast replacement of your existing pool motor.
- **Easy Programming:** Supplied with default speed settings – Just set the time and day of the week and the timer does the rest! To customize your speed settings, provide on and off times for Low and High Speeds!

### Motor Features

- 2 Speed – Permanent Split Capacitor Single Phase Motor
- 56 Frame (Offered in both Square and C-Face)
- ¾ HP thru 2 HP Full Rated
- High Efficiency
- Switchless
- Easy to Operate Programmable User Interface
- Freeze Sensor
- Designed for Quiet Operation
- Single Phase Motor
- Meets Title 20 Legislation

## Important Safety Instructions

**⚠ WARNING** This unit should not be serviced in the field. Do not disassemble or reconnect components in the field; use authorized factory service only. High voltage and rotating parts can cause serious or fatal injury. Safe installation, operation and maintenance must be performed by qualified personnel. Familiarization with and adherence to the National Electric Code, NFPA (National Fire Protection Association) standards and local codes is required. It is important to observe safety precautions to protect personnel from possible injury. Personnel should be instructed for handling each of the following:

- This motor control/timer should be powered from a separate circuit of adequate capacity to maintain sufficient voltage during starting and running conditions. Wire size shall be adequate to minimize voltage drop during starting and running. A qualified or licensed electrician should be used to properly size the motor control/timer supply circuit. Reference Articles 310 and 400 of the NEC for further information on wire sizing. A #8 AWG or larger conductor must be wired to the motor control/timer ground/bonding lug. Use #6 AWG in Canada. Wiring, including flexible cords, should be as short as possible to minimize voltage drop. All electrical connections in this system must be secure to prevent voltage drop and localized heating. If AC power is supplied by a GFCI circuit breaker, use a dedicated circuit that has no other electrical loads. GFCI use shall be in accordance with NEC and all other applicable state, local, and national electrical codes.
  - A 2-pole device, such as a circuit breaker, relay, timer, etc., that creates an open circuit when the motor control is "OFF" should be used to permanently connect the motor and timer. Failure to use a 2-pole device will result in voltage being present at the motor and timer and potential shock hazard.
  - To connect power to the motor control/timer unit, refer to the connection diagram on the motor nameplate and the timer connection label.
  - Insulate all connections carefully to prevent grounding or short circuits. Reinstall all conduit and terminal box covers.
  - Voltage to the motor control/timer shall be within plus or minus 10% of the nameplate voltage to avoid overheating and loss of performance.
  - Make sure the unit is electrically grounded and proper electrical installation wiring and controls are used consistent with local and national electric codes. Refer to "National Electrical Code Handbook" & NFPA No. 70.
- Employ qualified electricians. Insulate all connections carefully to prevent grounding or short circuits. Reinstall all conduit and terminal box covers.
- Code requirements differ from state to state. Install equipment in accordance with all applicable codes and ordinances in your area and in accordance with the National Electrical Code. All electrical connections should be made and maintained by a qualified or licensed electrician.
  - Make sure there are no unusual noises or vibrations when the motor/control is running. If noise and vibration are observed, refer to the Troubleshooting section on page 16.
  - This motor/control shall only be used above ground. It is not a submersible pump motor/control.
  - Pump size and pump impeller size shall match the existing hydraulic system of the pool.
  - Avoid contact with energized circuits or rotating parts.
  - Provide proper safeguards for personnel against rotating parts.
- ⚠ WARNING** *Always disconnect electrical power at the fuse box or circuit breaker before handling electrical connections or performing maintenance on this unit. Double check to make sure power is OFF, and that it cannot be turned on while you are working on the equipment.*
- ⚠ WARNING** In the event of a motor control/timer power outage, the motor control/timer may restart without warning.
- ⚠ WARNING** A poor electrical connection can overheat and cause terminal and/or terminal board failures. Because of this possibility, wiring harness quick-connect

terminals should be examined carefully for any signs of physical deterioration or loose fit to the terminals on the motor/control terminal board. If there is evidence that the electrical connection is loose or deteriorated, quick-connect terminals should be removed from the wiring harness so the wires can be connected directly to the motor/timer terminals. Care must be taken to assure connections are made to the proper terminals and adequate electrical clearances are maintained.

**⚠ WARNING** Although the 2EZ Speed™ motor control/timer is a product designed for outdoor use, rare circumstances (i.e., motor submersion due to flood or high pressure water stream aimed directly at motor), might allow water to infiltrate the motor control/timer. If this occurs, the unit shall be serviced by a qualified service person before operating. Wet internal components may cause a shock hazard.

**⚠ WARNING** To prevent accidents, make sure equipment is properly protected to prevent access by children or other unauthorized personnel.

**⚠ WARNING** The control/timer on top of the motor contains potentially hazardous voltage inside and should NEVER be opened or disassembled for any reason. The User Interface should NEVER be disassembled from the control/timer for any reason.

**⚠ CAUTION** Direct-coupled installations, such as pool pump products, require a careful check of shaft and coupling alignment. Position the motor/timer for proper alignment. Do not depend on a flexible coupling to compensate for misalignment. Do not strike the motor shaft with a hammer or other tool as this may damage the bearings.

**⚠ CAUTION** Act with care and in accordance with prescribed procedures in handling and lifting this equipment.

**⚠ NOTICE** Become familiar with the equipment and read all instructions thoroughly before installing or working on the equipment.

**⚠ NOTICE** The 2EZ Speed™ motor control/timer is properly packaged for shipment. Storage should be in a clean, dry indoor area.

**⚠ NOTICE** Safety glasses should be worn to inspect the equipment while it is running or while a mallet or hammer is used, especially if cover plates are removed.

**⚠ NOTICE** All aspects of the installation shall conform to the applicable requirements of the NEC (National Electrical Code), including Article 430 (Motor Circuits and Controllers), as well as all local codes.

**⚠ NOTICE** The 2EZ Speed™ motor control/timer shall be used for swimming pool pump applications only.

**⚠ NOTICE** There is a small time delay before the unit starts.

**⚠ NOTICE** The 2EZ Speed™ motor control/timer is controlled for automatic starts. Starting is controlled by your program schedule or via user input through the user interface mounted on top of the motor.

**⚠ NOTICE** The Association of Pool and Spa Professionals (APSP) recommends the following to keep your pool, spa, or hot tub safe and free from entrapment risk:

- Have your pool inspected by a licensed industry professional
- There is no backup for a broken, missing or inadequate drain cover. Replace any broken, missing or non-compliant drain covers with drain covers marked: "VGB2008," "ASME/ANSI A112.19.8-2007," or drain covers showing the swimmer logo.
- Pools or spas with a single main drain require additional protection. Options include:
  1. Eliminating the drain or reversing the flow
  2. Adding a second, properly spaced outlet
  3. Installing an SVRS (Safety Vacuum Release System). **THIS FEATURE IS NOT AVAILABLE ON YOUR NEW 2EZ SPEED™ MOTOR/TIMER.**
  4. Installing an automatic pump shut-off system
  5. Installing a suction-limiting vent system
  6. Adding a gravity drainage system

For additional information regarding the Virginia Graeme Baker (VGB) Pool and Spa Safety Act, consult the following web sites:

[www.apsp.org](http://www.apsp.org)  
[www.cpssc.gov/cpscpub/pubs/363.pdf](http://www.cpssc.gov/cpscpub/pubs/363.pdf)

## General Installation Instructions

Follow these instructions to prolong the life of your swimming pool pump motor/control.

- a. Protection against Heat
  - Shade the motor/control from the sun.
  - Provide ample cross ventilation.
  - Protect the motor/control from lint, etc., that can plug the ventilation openings.
- b. Protection against Dirt
  - Keep motor/control and surrounding area clean.
  - Avoid sweeping or stirring dust near the motor/control while it is running.
  - Avoid storing or spilling dry chemicals near the motor/control.
- c. Protection against Moisture
  - Shade the motor/control from rain, snow, etc.
  - Do not wrap motor/control with plastic or other air tight materials.
  - Locate motor/control on a slight elevation so water will not run or puddle nearby.
  - Avoid splashing water on or near the motor/control.
  - Contact qualified service person to repair leaky pipe joints or pump seals promptly.

## Basic Motor/Timer Operation

**⚠ WARNING** *A properly functioning motor may be too hot to touch and cause injury!* Be careful when touching the exterior of an operating motor! This condition is normal for most motors when operated at rated load and voltage.


Your 2EZ Speed™ motor/timer has been fully tested for pool pump use before shipment. It is designed to be a drop-in replacement for a standard single or two-speed pool pump motor with only minor programming required. To operate the motor control/timer, the installer must first set the time of day and the day of the week. Please see the specific sections of this manual for additional information.

Visually re-inspect the installation. Make sure that guards and other protective devices are securely in place. All covers and gaskets must be re-installed to minimize the entry of dirt and moisture.



## User Interface Identification

This section describes the motor's user interface.

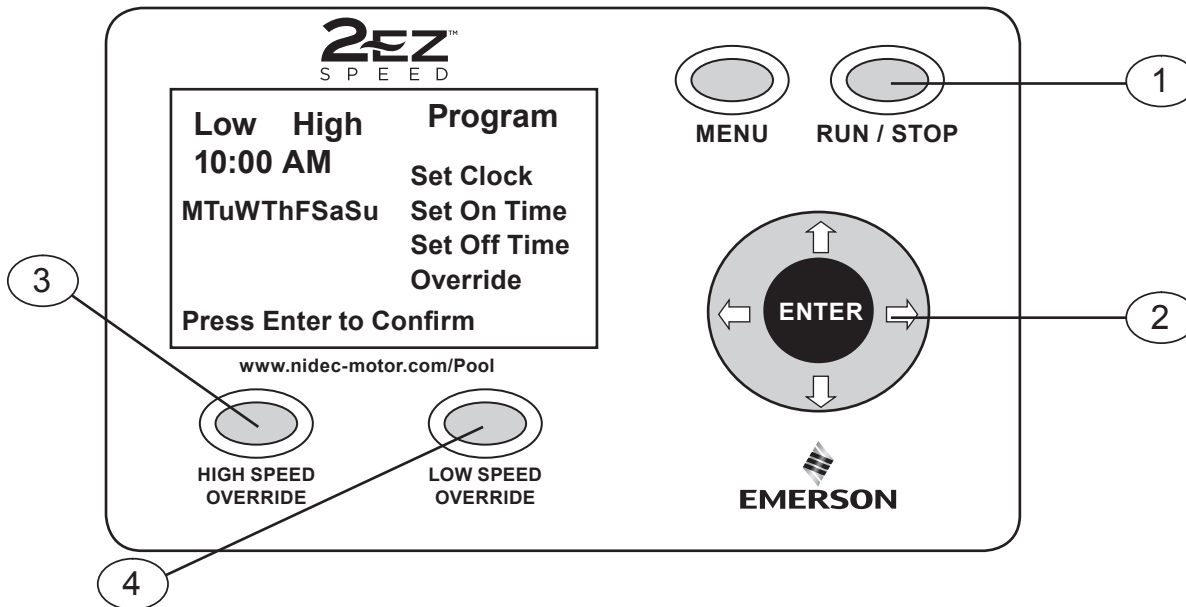


- ① **RUN/STOP** button. This button is used to activate or stop the unit operation. The button will be not be lit when power is applied to the user interface while in STOP mode and will be illuminated if in the run mode. **⚠ NOTICE** This button does **NOT** disconnect power to the unit.
- ② Press the **ENTER** button to confirm and save your selections. Use the ← → arrow keys for menu navigation purposes and the ↑ ↓ keys for changing values. For example, while changing the time, ← → keys will move you from the hours to the minute's field, while the ↑ ↓ keys will change the hour from 10 to 11 etc.
- ③ **High Speed Override** – Runs the motor on high speed and sets countdown timer for 60 minutes and will begin counting down. Pressing the button again will end override.
- ④ **Low Speed Override** – Runs the motor on low speed and sets countdown timer for 60 minutes and will begin counting down. Pressing the button again will end override.



## User Interface Identification


This section describes the user interface in detail, including buttons, and LCD data.

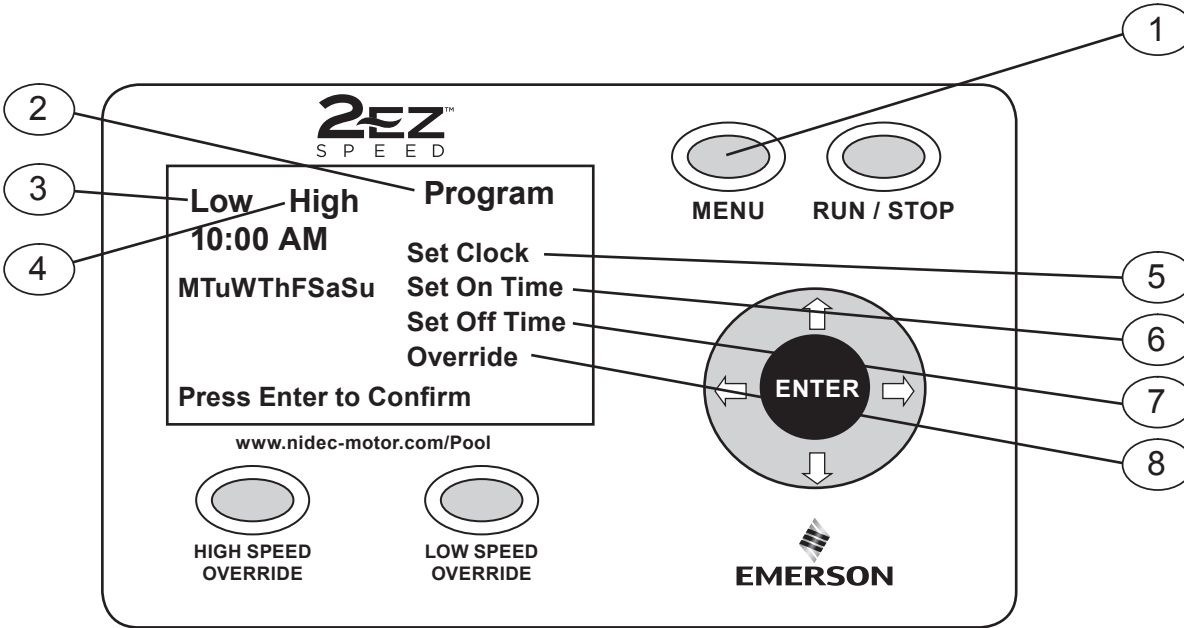

- 1 Press the **MENU** button. This menu allows you to set the time, day of the week, and for setting or reviewing the current schedule for Pump On and Off times for Low and High speeds.
- 2 **Program** icon is illuminated while a programmed setting is in process of running.
- 3 The **Low** icon is illuminated when the pump is in Low speed or when the Low speed is being programmed by the user.
- 4 The **High** icon is illuminated when the pump is on in High speed or the High speed is being programmed by the user. **NOTE:** While pump is priming, HIGH will be flashing.
- 5 **Set Clock** is flashing and illuminated after pressing menu and illuminated while programming the clock and time of day.
- 6 **Set On Time** is flashing and illuminated after pressing menu. Also illuminates while programming the On Time as the user navigates through the setting of both High and Low Speeds for both Monday thru Friday and Saturday/Sunday settings.
- 7 The Menu item **Set Off Time** is flashing and illuminated after pressing menu. Also illuminates while setting the Off Time as the user navigates through the setting of both High and Low Speeds for both Monday thru Friday and Saturday/Sunday settings.
- 8 **Override**, is illuminated after the user has selected one of the Override buttons, and while it is in Override mode.

## User Interface Identification

This section describes the user interface in detail, including buttons, and LCD data.

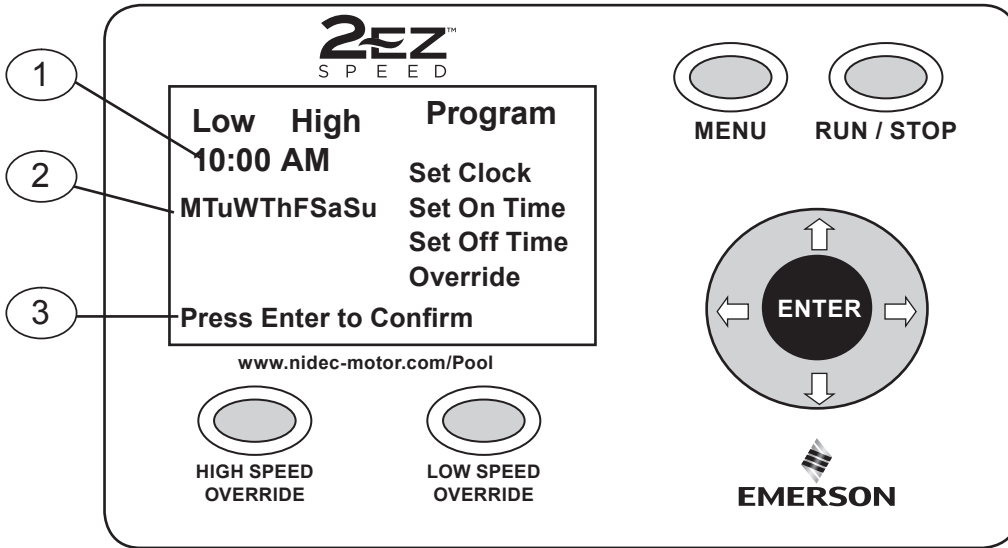


- 1 In **MENU** mode, the clock and day of the week will be used to set the Clock, On Time, and Off Time for all settings, and while in RUN mode, it will display the set time and day of the week.
- 2 When setting the clock, the user will be prompted to also the select the current day of the week. While in RUN mode the current day of the week will be illuminated based on the user setting.
- 3 **Press Enter to Confirm** is illuminated during the MENU mode, This will remind the user that pressing enter will confirm the settings the user has selected. While in MENU mode, a second press of the enter key will move the navigation forward to the next menu item even if there is no change made to that particular setting.

# How to Program Your 2EZ Speed™ Control Quick Start



## A) Setting the Clock and Day

- Press Menu
  - Clock Flashing
  - Press Enter
  - Hour Digits will be Flashing
  - Use Up/Down ↑↓ to adjust the digits
  - Use Side to Side ⇐⇒ to Navigate thru the fields to adjust minutes as well as AM/PM
  - Select current Day of the Week by using the up/down arrows
  - Press Enter to complete and proceed to setting speeds

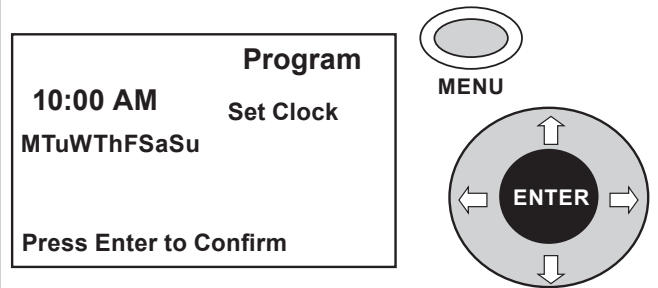


## B) Programming Speeds

- While in Menu
  - Low will be Blinking
  - MTuWThF will be illuminated
  - Set On Time is illuminated
  - Press Enter
  - Use Up/Down ↑↓ to Change Time On for Low Speed Monday thru Friday
  - Use Side to Side ⇐⇒ to Navigate
  - Press Enter
  - MTuWThF will be illuminated
  - Set Off Time is illuminated
  - Use Up/Down ↑↓ to Change Time Off for Low Speed Monday thru Friday
  - Use Side to Side ⇐⇒ to Navigate
  - Press Enter
    - Programming Monday-Friday High Speed
      - Same as above except High will be illuminated
    - Programming Saturday/Sunday Low Speed
      - Same as above except Days of Week will read SaSu
    - Programming Saturday/Sunday High Speed
      - Same as above except Days of Week will read SaSu and High will be illuminated

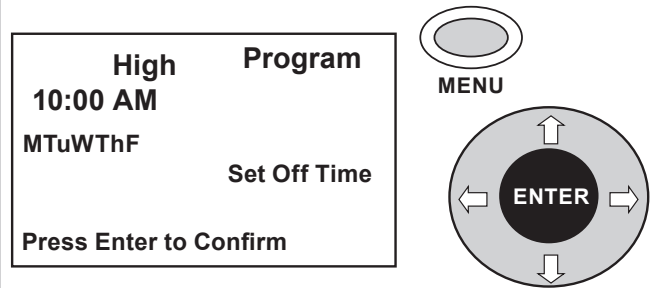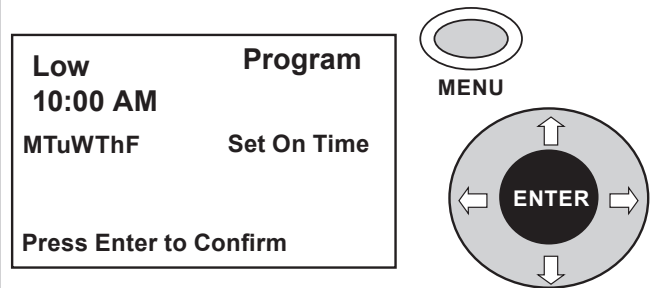

## C) Using Low and High Speed Override

- The user can press either the Low or High Speed Override button at any time.
  - 60 Minutes will appear on the clock and begin to countdown
  - Pressing the Override button again will Exit from the override selection and user programming will resume.
  - When the 60 minute timer reaches zero, the unit will exit from override mode and user programming will resume

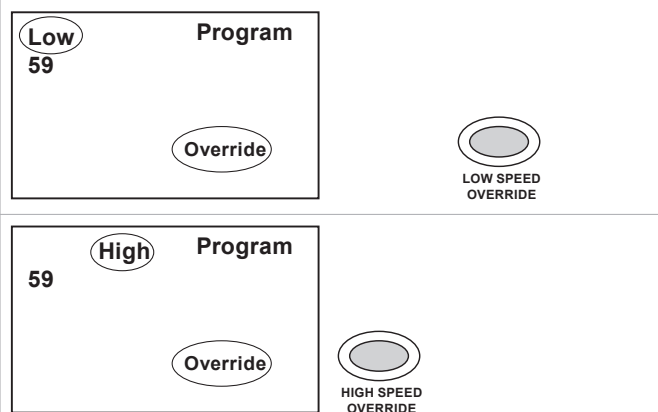

## How to Program (Detail) *See Quick Start if Desired*

### Factory Settings

Timer is preset with the following factory default settings.

#### Monday thru Friday Low Speed Setting

Time On: 7:00 A.M.

Time Off: 2:00 P.M.

#### Monday thru Friday High Speed Setting

Time On: 8:00 P.M.

Time Off: 12:00 A.M.

#### Saturday-Sunday Low Speed Setting

Time On: 8:00 A.M.

Time Off: 4:00 P.M.

#### Saturday-Sunday High Speed Setting

Time On: 8:00 P.M.

Time Off: 12:00 A.M.

---

### Restore Factory Defaults

The preset factory settings above can be restored at any time. To change the program settings back to their factory default settings:

1. While in STOP mode, press the enter button for 5 seconds. Verify Press ENTER to confirm appears in the display.
2. Press ENTER again if you want to return to factory settings. **NOTE:** After ENTER is pressed, the motor will adjust and run according to the factory default settings. All prior programmed settings (user defined) will be lost.

---

### Setting A User Program

Press the MENU button to enter the MENU mode you will be guided through a sequential menu selection: (Please use  $\leftarrow \rightarrow$  keys to navigate and  $\uparrow \downarrow$  keys to change data.)

- A. Set Clock and Day of Week**, press ENTER  
Set Hours/Minutes/AM/PM and day of the week.  
Days of the Week are denoted by MTuWThFSaSu  
(M=Monday, Tu=Tuesday, W=Wednesday,  
Th=Thursday, F=Friday, Sa=Saturday, Su=Sunday)  
Once correct day of the week is chosen, press ENTER

- B. Set Low Speed On Time (Monday thru Friday)**  
LOW will be flashing, Press ENTER. Set desired "on" time for motor to begin running on low speed. Use  $\leftarrow \rightarrow$  keys to Navigate through each of the fields. The flashing field is the active field. Using the  $\uparrow \downarrow$  keys to adjust the time as desired for the low speed to turn on. Pressing ENTER will finalize your selections.  
**NOTE: In each Low or High Setting the user can select the "Off" position when selecting the hour. Off resides between the hours of 12 and 1. If Off is selected that setting will then be ignored.**
- C. Set Low Speed Off Time (Monday thru Friday)-**  
LOW will be flashing. Set desired "off" time for motor to stop running on low speed. Use  $\leftarrow \rightarrow$  keys to navigate through each of the fields. The flashing field is the active field. Using the  $\uparrow \downarrow$  keys, adjust the time as desired for the low speed to turn off. Pressing ENTER will finalize your selections.
- D. Set High Speed On Time (Monday thru Friday)**  
HIGH will be flashing, Press ENTER Set desired "on" time for motor to begin running on high speed. Use  $\leftarrow \rightarrow$  keys to navigate through each of the fields. The flashing field is the active field. Using the  $\uparrow \downarrow$  keys adjust the time as desired for the high speed to turn on. Pressing ENTER will finalize your selections.
- E. Set High Speed Off Time (Monday thru Friday)**  
HIGH will be flashing. Set desired "off" time for motor to stop running on high speed. Use  $\leftarrow \rightarrow$  keys to navigate through each of the fields. The flashing field is the active field. Using the  $\uparrow \downarrow$  keys, adjust the time as desired for the high speed to turn off. Pressing ENTER will finalize your selections.
- F. Set Low Speed On Time (Saturday and Sunday)**  
Press ENTER Set desired "on" time for motor to begin running on low speed. Use  $\leftarrow \rightarrow$  keys to navigate through each of the fields. The flashing field is the active field. Using the  $\uparrow \downarrow$  keys adjust the time as desired for the low speed to turn on. Pressing ENTER will finalize your selections.
- G. Set Low Speed Off Time (Saturday and Sunday)**  
Set desired "off" time for motor to stop running on low speed. Use  $\leftarrow \rightarrow$  keys to navigate through each of the fields. The flashing field is the active field. Using the keys, adjust the time as desired for the low speed to turn off. Pressing ENTER will finalize your selections.

**H. Set High Speed On Time (Saturday and Sunday)**

Press ENTER. Set desired “on” time for motor to begin running on high speed. Use ← → keys to navigate through each of the fields. The flashing field is the active field. Using the ↑↓ keys adjust the time as desired for the high speed to turn on. Pressing ENTER will finalize your selections.

**I. Set High Speed Off Time (Saturday and Sunday)**

Set desired “off” time for motor to stop running on high speed. Use ← → keys to navigate through each of the fields. The flashing field is the active field. Using the ↑↓ keys, adjust the time as desired for the high speed to turn off. Pressing ENTER will finalize your selections.

**High Speed Override** – Pressing the High Speed Override button will set the motor on high speed for 60 minutes. In override mode, the LCD displays an illuminated “Override” icon. Pressing High Speed Override button again will exit override and your program settings will take precedence.

**Low Speed Override** – Pressing the Low Speed Override button will set the motor on low speed for 60 minutes. In override, the LCD displays an illuminated “Override” icon. Pressing Low Speed Override button again will exit override and your program settings will take precedence.

**Functions Of The Enter Button:**


1. Press to activate menu selection.
2. Press to confirm changes to each menu selection (ENTER can be pressed to exit a menu selection at any point if that setting is acceptable as is).
3. After pressing to confirm changes, pressing ENTER again will take you out of the MENU mode.

**Three events will cause the motor to run or stop.**

**The first event is a timer event.** This type of event occurs when the current system time matches one of the programmed Time On or Time Off setting.

If the programmed time settings overlap, the following rules are used to determine which setting takes precedence.

1. Time “On” takes precedence over Time “Off”.
  - a. Example:



In the above example –  
 Low On 8 AM  
 High On 10 AM  
 High Off 12 PM  
 At 12 PM Transitions from High to Low  
 Low remains On until scheduled 7 PM Off time.

The above scenario works the same whether Low overlaps with High, or High overlaps with Low.

2. Setting the “On” time and “Off” time to the same value for one of the flow settings, will cause the setting to be used continuously 24 hours a day.
  - a. Example Setting:  
 Low On: 8:00 AM  
 Low Off: 8:00 AM
3. As the day changes from Friday to Saturday, the settings for Saturday become effective immediately at midnight. As the day changes from Sunday to Monday, the settings for Monday become effective immediately when the day changes at midnight.

**The second event is a press of the RUN/STOP button.**

1. When the timer has been “enabled”, the RUN/STOP button will be illuminated. Pressing the RUN/STOP button when the timer is “enabled” will disable the timer and the motor will STOP. The RUN/STOP button will NOT be illuminated when the timer is “disabled.” When the RUN/STOP button is illuminated, power is sent to the motor based on the time and day of the week and the programmed settings.


**The third event is a press of the High Speed Override, or Low Speed Override button.**

1. This button press will only take effect if the timer is “enabled” (RUN/STOP button is illuminated.)
2. After pressing the High Speed Override or Low Speed Override, the motor will operate at the selected speed for 60 minutes. Pressing Override again while either High or Low Speed Override is enabled, will end the override condition and the programmed speeds will take over.

**In the event of a power outage**, the time and day of the week will be stored in memory for a minimum of 12 hours. All other programming will not be affected by the outage.

**Priming Feature:** The motor always starts at high speed for 4 minutes, after any period of motor inactivity. This ensures proper priming of the pump. The HIGH icon will be flashing while in prime mode.

## How to Connect

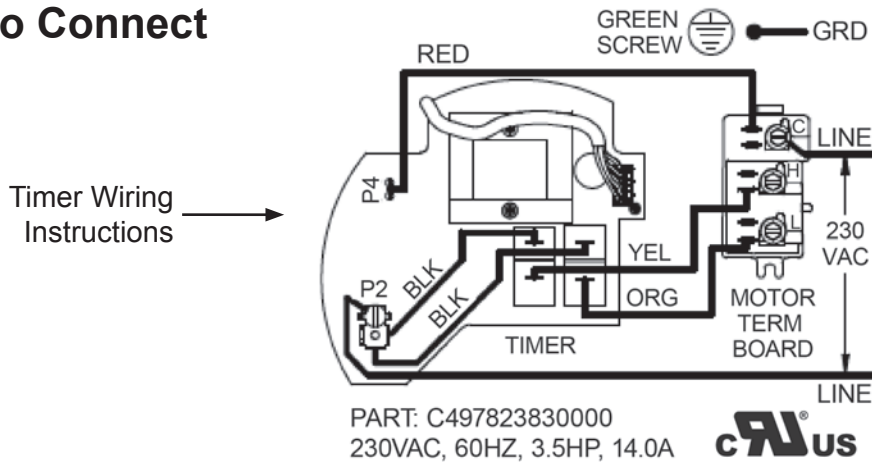

**⚠ WARNING** This unit shall not be serviced in the field. Do not disassemble or reconnect components in the field; use authorized factory service only. High voltage and rotating parts can cause serious or fatal injury. Safe installation, operation and maintenance must be performed by qualified personnel.

Familiarization with and adherence to the National Electric Code, NFPA (National Fire Protection Association) standards and local codes is required. It is important to observe safety precautions to protect personnel from possible injury.

**⚠ WARNING** Always disconnect electrical power at the fuse box or circuit breaker before handling electrical connections or performing maintenance on this unit. Allow the motor to come to a complete stop. This will allow the capacitors to discharge any residual voltage for safety. Double check to make sure power is OFF, and that it cannot be turned on while you are working on the equipment.

**⚠ WARNING** The control/timer on top of the motor contains potentially hazardous voltage inside and should NEVER be opened or disassembled for any reason. The User Interface should NEVER be disassembled from the control/timer for any reason.

The motor/control is designed to be operated on a 230 volt, 60 Hz nominal power supply. The suitable voltage range is 207-253 volts under rated load conditions.

“Hot” power connections should only be connected to the C terminal of the motor terminal board assembly and P2 terminal of the control circuit board. Connect supply ground (Green or Green with Yellow insulated lead wire) to the ground screw provided in this same connection area near the motor terminal board assembly (see connection label on motor/control). Permanent field wiring should be from a 2-pole device (a device that disconnects two “hot” lines.) See Important Safety Instructions on pages 4 and 5.

If AC power is supplied by a GFCI circuit breaker, use a properly sized dedicated circuit that has no other electrical loads. Use of a GFCI circuit with electrical loads other than the 2EZ Speed™ motor/control and timer could result in nuisance tripping. See Important Safety Instructions Section (pages 4 and 5) for more information.

With the 2EZ Speed™ motor/control, an external timer is not required to operate the motor. If an external mechanical/digital timer is used, follow the manufacturer’s connection instructions, however, in order for the 2EZ Speed™ motor and timer to be the primary control, the power must continually be supplied to the 2EZ Speed™ motor/control through the external timer.

**⚠ NOTICE** Some auxiliary equipment is dependent on the operation of the main pump, please consider these when programming your timer/user interface.

### Freeze Sensor

The 2EZ Speed™ motor and timer includes a freeze sensor feature that is mounted internally in the control. If the timer is “enabled” (on), the sensor will detect temperatures below 40 degrees Fahrenheit and run the motor on low speed 30 minutes on and 30 minutes off. The freeze sensor cycle will not override the time when the program schedule would normally operate the motor.

**⚠ NOTICE** The level of freeze protection provided will depend on the location of the 2EZ Speed™ motor/control, since the temperature sensor is located in the timer. Homeowners should be informed of this when depending on this product for protection. The freeze sensor only provides limited protection from freezing, and does not guarantee total freeze protection.



## Locking The Keypad

To prevent undesired changes to your programming, a keypad lockout feature is included.

### To set the keypad lockout mode:

1. Press the down arrow first and then press the MENU button. Hold both for 2 seconds. After 2 seconds the "Press ENTER to Confirm" icon in the display will start blinking.
2. Press ENTER. The unit is now in keypad lockout mode, and only LOC should be displayed for 5 seconds using the clock display. After 5 seconds, LOC turns off, and the display will revert back to the normal display.

### NOTES:

- Pressing any button on the keypad while in keypad lockout mode, (other than the RUN/STOP button), will cause LOC to appear on the display for 5 seconds after the button is pressed. After 5 seconds, the display will revert back to the normal display.
- Additional button presses during the 5 seconds will not extend the time LOC is displayed. Pressing the RUN/STOP button while in lockout mode will either stop the motor (if it was running) and the RUN/STOP button will not be illuminated, or start the motor in program mode if it was stopped and the RUN/STOP button will then be illuminated.

### To exit keypad lockout mode:

1. Press the down arrow and then press the MENU button. Hold both for 2 seconds. For the first 2 seconds, the display will just display LOC. After 2 seconds, LOC turns off and the "Press ENTER to Confirm" icon will start blinking.
2. Press ENTER. The display will revert back to the normal display. The keypad is now unlocked and all the buttons will function normally. (If the ENTER button is not pressed within 5 seconds, the keypad will stay locked, the "Press ENTER to Confirm" icon will go out, and the display will revert back to the normal display.

---

## Operating the 2EZ Speed™ Pool Motor/Control with other Equipment Pad Items

### Heaters

If your pool heater has a time clock function, it is very important to make sure the pool filtration pump is running anytime the pool heater is running. The pool heater should

not run when the filtration pump is off. The pool heater program timer should be set to start and stop during the programmed on and off times programmed on your 2EZ Speed™ pool motor/control. Be aware of the backup power supply feature on the 2EZ Speed™ pool motor/control as other time clocks may lose the correct time in the event of a power outage. **NOTE:** It is always good practice to check and reset the current time of day and day of week settings on your equipment pad time clocks in the event of a power outage or during spring/fall time changes.

### Pool Cleaners with Booster Pumps

It is recommended to start your pool sweep one hour or more **after** your filtration pump has started and to stop the pool sweep one hour or more **before** your filtration pump shuts off. If your pool cleaner operates on a time clock, it is very important to set your pool cleaner on and off times according to the above recommendation. Be aware of the backup power supply feature on the 2EZ Speed™ pool motor/control as other time clocks may lose the correct time in the event of a power outage. **NOTE:** It is always good practice to check and reset the current time of day and day of week settings on your equipment pad time clocks in the event of a power outage or in the during spring/fall time changes. The manufacturer's product manual for your pool cleaner will have recommendations for proper cleaning time durations.

### Pool Cleaners without Booster Pumps

After your 2EZ Speed™ pool motor is running and your pump is fully primed, follow the pool cleaner manufacturer's startup procedures then follow the procedures for High Speed Override found on page 12.

### Other pool equipment pad item with a timer

If an item has a timer regulating its operation, it may be required that the equipment pad item runs only when the 2EZ Speed™ motor/control is running. Check the item's product manual to properly determine if the item should run only when the filtration pump is running. If this is the case, follow these instructions when synchronizing the timer operations of your various equipment pad items. **NOTE:** It is always good practice to check and reset the current time of day and day of week settings on your equipment pad time clocks in the event of a power outage or in the event of a spring/fall time changes.

### Any other pool equipment pad item without a timer

Please follow the operating instructions of these equipment pad items.

## General Troubleshooting

This chart suggests common answers to electric motor and control/timer issues. Refer to your pump manual for hydraulic guidance. When repetitive issues occur, Nidec recommends contacting your local pool and spa professional for technical assistance.

Symptom	Possible Causes	Corrective Action
Motor/Control fails to start	Blown Fuse or Open Circuit Breaker	Replace fuses with time delay type or reset breaker.
	Incorrect Voltage to Motor/Control	Verify voltage to the motor terminals matches the nameplate voltage requirements. 207-253 Volts (60 Hertz) is the allowable voltage range for this product. Is there a timer, a controller, or a line switch? Are they in the ON position?
	Improper terminal connections	Turn off power. Verify connections are per the nameplate connection diagram.
	Blocked Pump or Shaft	Turn off power. Follow pump manufacturer's instructions for dislodging foreign matter inside the pump.
Motor/Control does not come up to full speed	Application issue	Call your pool service professional. The motor/control could be overloaded.
	Low Voltage	Verify voltage to the motor terminals matches the nameplate voltage requirements.
Motor/Control stalls during operation	Low Voltage	Verify voltage to the motor terminals matches the nameplate voltage requirements.
Motor vibrates or is excessively noisy	Motor and Pump misalignment	Consult your pump manual for proper alignment instructions or call your pool service professional. Before taking any corrective actions, ensure the power is OFF.
	High Voltage	Verify motor/control voltage to the terminals matches the nameplate voltage requirements.

### How to Lower Utility Bills by using the 2EZ Speed™ Motor/Timer

Did you know that just by reducing the motor speed to low, you optimize your pool energy costs and still clean your pool? This is a primary advantage of the 2EZ Speed™ motor/timer! Your electric bill is based on the number of Kilowatt hours used in a typical billing cycle. The fewer Kilowatts used, the lower the bill!

To calculate how much energy your current pool motor is using and to calculate your potential savings with the 2EZ Speed™ motor/timer, visit [www.nidec-motor.com/Pool](http://www.nidec-motor.com/Pool) and use our energy calculator. The calculator will show you how many hours to run your pump each day along with the appropriate speed settings for maximum energy savings while enabling the proper amount of daily flow to properly filter your pool.

**IMPORTANT NOTE:** Contact your local utility company to determine if there are times when usage may be prohibited, then program your 2EZ Speed™ motor/timer to turn off or to run at a very low flow rate during these periods.

## Recommended Maintenance

**▲WARNING** Always disconnect electrical power at the fuse box or circuit breaker before handling electrical connections or performing maintenance on this unit. Allow the motor to come to a complete stop. This will allow the capacitors to discharge any residual voltage for safety. Double check to make sure power is OFF, and that it cannot be turned on while you are working on the equipment.

Periodically inspect the installation.

- Check for dirt accumulations, unusual noises or vibration, overheating, worn or loose couplings, high motor amps, poor wiring or overheated connections, and for loose mounting bolts or guards.
- Remove dirt accumulation, particularly in and around the ventilation openings on the motor by vacuuming. Dirt accumulations can cause motor overheating and a fire hazard.
- Do not use any type of solvents! Some solvents may have adverse interactions with the motor insulation, finish or bearing lubricants. Solvents are also highly flammable.
- This motor has permanently lubricated bearings – No further lubrication is recommended or required.

---

## LIMITED WARRANTY

Nidec Motor Corporation (hereinafter “Nidec”) extends the following LIMITED WARRANTY to the purchaser and to its customers (collectively referred to as the “Purchaser”) of the enclosed motor and components: the motor and components are free from defects in materials and workmanship under normal use, service and maintenance FOR A PERIOD OF 12 MONTHS FROM THE DATE OF ORIGINAL PURCHASE FROM NIDEC OR THE NIDEC DEALER/RETAILER, NOT TO EXCEED 24 MONTHS FROM THE DATE OF MANUFACTURE BY NIDEC. THE FOREGOING WARRANTY IS THE ONLY WARRANTY GIVEN AND NO OTHER WARRANTY IS PROVIDED, EXPRESS OR IMPLIED, INCLUDING WITHOUT LIMITATION, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Certain aspects or disclaimers are not applicable to consumer products, i.e., motors and components acquired by individuals and used for personal, family or household purposes (as distinguished from industrial or other purposes). Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. This warranty gives you specific legal rights, and you may have other rights which vary from state to state.

Certain repairs or services are the responsibility of the Purchaser and the Purchaser is expected to pay for them. This warranty does not extend to any losses or damages due to misuse, accident, abuse, neglect, negligence, unauthorized modification or alteration, use beyond rated capacity, or improper installation, maintenance, application or use, including, without limitation, use in a manner contrary to the accompanying instructions or applicable codes.

If within thirty (30) days after Purchaser’s discovery of any warranty defects within the above stated warranty period, Purchaser notifies Nidec or the dealer from whom the motor was purchased in writing, Nidec shall, at its option and as Purchaser’s exclusive remedy, repair or replace or refund the purchase price for, that portion of the motor and components found by Nidec to be defective. Failure by Purchaser to give such written notice within the applicable time period shall be deemed an absolute and unconditional waiver of Purchaser’s claim for such defects. Purchaser must write or call the dealer from whom the motor was purchased for directions regarding the shipment of the motor, with freight prepaid by the Purchaser, to an authorized service location for warranty service. If Purchaser is unable to contact the dealer to obtain sufficient instructions regarding the handling of the motor, Purchaser should write Nidec at the address below, giving the motor model number, the dealer’s name, address and number of dealer’s invoice; and describing the nature of the alleged defect. Arrangements for warranty service will then be made by Nidec. If the motor is damaged in transit, Purchaser should file a claim directly with the carrier.

IN NO EVENT, REGARDLESS OF THE FORM OF THE CLAIM OR CAUSE OF ACTION (WHETHER BASED IN CONTRACT, INFRINGEMENT, NEGLIGENCE, STRICT LIABILITY, OTHER TORT OR OTHERWISE), SHALL NIDEC’S LIABILITY TO PURCHASER OR ITS CUSTOMER EXCEED THE PRICE PAID BY PURCHASER FOR THE SPECIFIC MOTOR OR OTHER GOODS PROVIDED BY NIDEC GIVING RISE TO THE CAUSE OF ACTION. IN NO EVENT SHALL NIDEC’S LIABILITY TO PURCHASER OR ITS CUSTOMER EXTEND TO INCLUDE INCIDENTAL CONSEQUENTIAL OR PUNITIVE DAMAGES, WITH RESPECT TO CONSUMER PRODUCTS, SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.



## **Nidec Motor Corporation**

Nidec Motor Corporation  
8050 W. Florissant Avenue  
St. Louis, MO 63136

[www.nidec-motor.com/pool](http://www.nidec-motor.com/pool)

Pool Motor Product Service Hotline:  
1-800-566-1418



